

LIVINOX[®]

Instruction Manual



LGH-Rumex 2B
2 Burner Glass Hob



LGH-Rumex 3B
3 Burner Glass Hob



LGH-Eureca 2B
2 Burner Glass Hob

LIVINOX[®]

LIVINOX Malaysia Sdn Bhd
Blk B-1-29 Dataran Cascades NO.13A,
Jalan PJU 5 Kota Damansara,
47810 Petaling Jaya, Selangor.

Careline
603-76116192

Before operating this unit, please read these instructions completely.

Dear Consumer,

Thank you for your purchase of our products. To ensure you use the appliance in the best effect, please read this instruction manual with care before using and save it for future reference.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spares


CONTENT

SPECIAL PRECAUTIONS	1
PARTS IDENTIFICATION	3
INSTALLATION	4
DIRECTION FOR USE	5
CLEANING AND MAINTENANCE	6
TROUBLE-SHOOTING GUIDE	7

(1) SPECIAL PRECAUTIONS

To avoid any danger and loss when using the hob, we make below mark. Below is all about special precautions. Please pay full attention to it and operate in a right way.

■ Marks are identified by different danger and loss level

 **WARNING** If ignoring this mark and operate improperly, it may lead die, hurt or fire.


 **ATTENTION** If ignoring this mark and operate improperly, it may lead die, hurt or fire.

ADVICE In order to be safe and convenient when using it, please kindly understand this content.


■ Marks for ATTENTION

				
BURNING	MUST DO	FORBIDDANCE	NO FIRE	NO TOUCH NO DISASSEMBLY

DANGER


 **When gas leakage**
 1. stop using the hob immediately.
 2. turn off the gas valve
 3. open windows and doors
 4. contact the local gas company




 **If case of gas leakage**
 *do not ignite any fire.
 *do not turn on any electrical appliance
 *do not touch power plug
 *do not use telephone nearby





Flame spark will lead fire.


 **When feeling strange burning, or smell gas, or in case of earthquake, fire, please do as below:**
 1. turn the knob to OFF position
 2. turn off the gas valve
 3. contact our after-sale service dept. immediately


Above is to avoid fire or fault.

 To install, repair, move a gas appliance, must be carried out by our service dept., or a registered gas installer. Otherwise, we will not take the responsibility for any damage.

 Any repair, disassembly must be carried out by registered technical people. Or else, it may leads fire or fault.

 Must use the specified gas pipe.


 Do not put any spray container nearby the hob. It may lead fire.

 Any easy-burned item like clothes, newspaper, coal oil, can not be put nearby the hob.




It may lead fire.





 Do not use coal oil, gas oil, or other easy-burning and explosive product nearby the hob.


It may lead fire.


ATTENTION


 There should be space of at least 400mm height between the hob bottom and cupboard. And the space can not be sealed with hole of diameter not less than 0.2 sq meter.


 Gas container can not be put right below the hob. Gas pipe not more than 2 meters.


 To ensure the burner and trivet are put in the right place before using the hob.

 Do not touch the trivet and burner immediately after using it, because they're very hot.

 There should be space between hob and items nearby. (not less than 150mm from the wall, 1mm from above)

 The hob should be kept more than 1 meter away from the gas container. Gas pipe can not reach other part of the hob.

 Keep the kitchen in ventilated situation. But do not let strong wind to below the burner directly.

 
 
 Turn the knob to OFF and turn off the gas valve after using. Remember to turn off the gas brake when you go out or go to sleep.

ADVICE

Check whether the gas pipe are in a good situation sometimes. The pipe should be changed for every two years.

(2) PARTS IDENTIFICATION

1. PARTS IDENTIFICATION

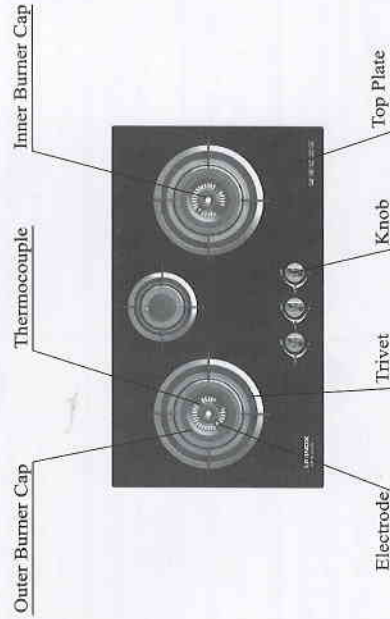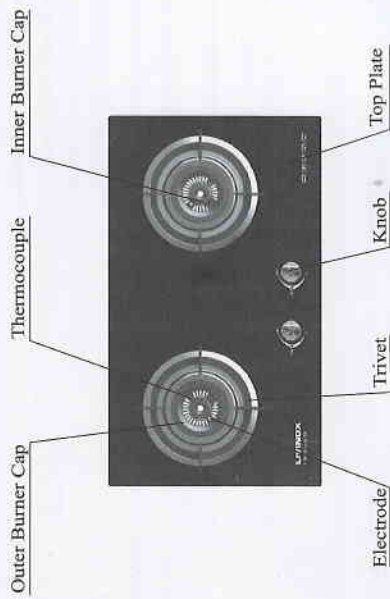


Remark: above is the built-in hob structure and part identification. Other type of hob can refer to above picture.

(3) INSTALLATION

1. Open holes in the cupboard:

 
Open holes in the cupboard with the instruction paper in the package. (see picture 3)

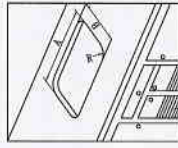

picture 3


2. Install the gas pipe

 A. If to use plastic tube: put in the airproof caution, connect the tube and hob connector, fasten the clip. (see picture 4)

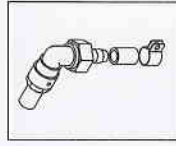

picture 4

 B. If to use metal tube: put in the airproof caution, fasten the nuts on the connection. (See picture 5)

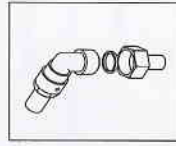

picture 5

3. Put the hob in the right hole on the cupboard, check whether it's installed in a balance.

The bottom of top plate should be stuck with seal packing.

4. check leakage: turn on the gas valve. check whether with soap water there's leakage in the connection. If any leakage, it needs to be reinstalled (there'll be air bubble for leakage).

(4) DIRECTION FOR USE

Ignition safety hob have flame failure protect device. When accident flame failure occurs by wind or spilled liquid, the flame failure protect device will shut the gas supply automatically.

1. put in battery properly. (battery case in the right-front side at the hob bottom).
2. turn on the gas valve
3. Turn the knob left until it reaches the full on position (about 90 degree anti-clockwise).

Having heard the sound-of continuous sparks, simultaneously the burner will be ignited.

 
Keep pushing the knob for 5-8 seconds before taking your hands off.

4. you can choose five different fame by turning the hob.

5. turn the hob to OFF by clockwise. After continuous sound, the gas supply will be broken, and flame out.

NOTE:

1. For the newly installed hob or hob not used for some time, it may fail to ignite at first time, because there's air in the tube. You can repeat until the air is exhausted out, then it can work.
2. If there's yellowish flame or uneven flame, adjust the damper at the bottom to get a normal flame.

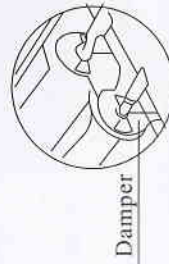

picture 6

(5) CLEANING AND MAINTENANCE

To ensure the hob can be used properly, the clearance and maintenance is necessary. Keep the hole of burner cap and gas flow not to be stuff. Keep the electrode and thermocouple clear. Before clearing and maintenance, shut off the gas supply and let all parts cold.

Wash burner caps, burner, electrode, thermocouple and trivets with mild detergent when they're dirty. Then put them back to their proper position. Use steel wire to clear the dirt in the burner cap. When the top plate get dirty, never use any sharp or hard brush but only sponge brush with mild detergent to clean them.

To check the gas tube often, and change new gas tube for every two years.

(6) TROUBLE-SHOOTING GUIDE

Trouble	Cause	Remedy
Burners can not be ignited.	Gas supply is not opened	Turn on the gas <input type="radio"/>
	Gas type is bent or crushed.	Straighten or changing the tube <input type="radio"/>
	Short of gas supply	Replace it <input type="radio"/>
	Air remains in the gas piping	Repeat igniting operation until all air in the piping is purged out. <input type="radio"/>
	Electrode not in right position	Adjust it's position <input type="radio"/>
	Small spark when ignition operation	Clear the Electrode <input type="radio"/>
	Out off battery	Replace or install the battery <input type="radio"/>
	Electrode broken	Replace the ignition electrode <input type="radio"/>
	Thermocouple dirty, broken, or not in right position	Clear or replace it, or adjust it's position <input type="radio"/>
	Electromagnet valve broken	Replace it <input type="radio"/>
Flame is extinguished	Valve broken	Replace it <input type="radio"/>
	Uneven flame in thermocouple	Adjust the damper <input type="radio"/>
Gas leakage (or smell of gas)	Cracks or holes in Gas pipe	Replace it with a new one <input type="radio"/>
	The main flame of burners is not ignited	Ignite again after the gas is clear in the air. <input type="radio"/>
	Gas valve is not well sealed	Replace gas valve <input type="radio"/>
	Sealing packing for gasvalve is broken	Replace the sealing packing. <input type="radio"/>
	Burner cap not in proper position	Put it to proper position <input type="radio"/>
Flame not regular	Gas pressure not enough	Check the gas flow <input type="radio"/>
Week flame	Damper hole is too big	Adapt the damper <input type="radio"/>
Long and yellow flame	Damper hole is too small	Adapt the damper <input type="radio"/>
Uneven flame	Hole for burner cap is stuff	Clear the hole <input type="radio"/>

Remark: Trouble with mark “○” can be solved by final users. Trouble with “△” must be repaired by technical people. If final user can not solve problem according to above guide, call our after-sale service.